



Assembly instructions for National Brood and National Super

A National Brood & Super both comprise of two outer walls, two inner walls, two top locking bars and two bottom locking bars. The locking bars with the chamfered edges are the bottom ones. The outer walls each have two long grooves and 4 cut out slots. The inner walls are smaller and rectangle in shape, one edge is chamfered, this is the edge the frame sits on when assembled. Included are all nails for assembly.

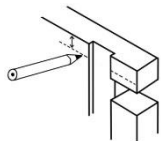


Start by marking the outer wall 7/16" down, adjacent to the long groove.

Apply glue to the grooves in the outer walls and then the inner boards into the groove, ensuring the chamfered edge, the edge the frame will sit on, lines with mark you made.

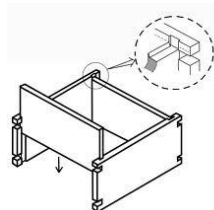

push
up

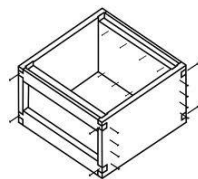

Apply glue to the inner faces of the locking bars and then push them into the slots, bevelled type at the bottom.

Nail locking bars into position using 2" nails. Nail locking bars from inside 3/16" down from runner, using 1 1/2" nails. Nail through the outer walls into the inner walls using the 2" galvanised lost heads. Four nails down each side for a brood box and 3 for a super.

Nail the locking bars into place with the same sized nails. Using the sherardised pins nail from inside through to the locking bars, 3 across the top and 3 across the bottom on each side.