
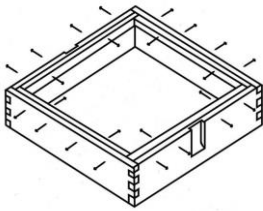


Assembly instructions for Deep National/Commercial Roof



Place together the side walls ensuring the vent cut outs are facing outwards and are opposite each other. Glue and nail the walls together as shown using the 24 x 40mm round head nail.

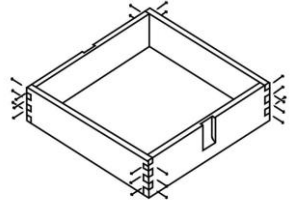

Next position the roof battens into place leaving a clearance of 9cm from top where your vents are and bottom of the batten; this gives space for a feeder should you need to feed your bees. Use glue as well as nails to ensure they are secure. Use the 25mm pins to secure from inside and the 40mm pins from

the outside.

Next, ensuring the roof is square and the vents are near the top, nail on the top roof panel using 8 x 40mm round head nails. Ensure the vent grilles line up with the side cut-outs.

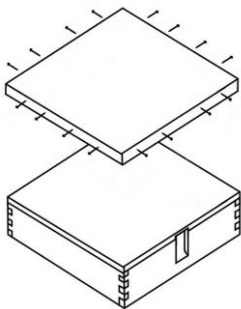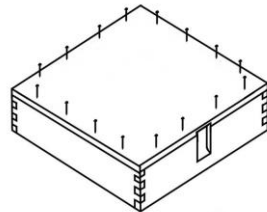

Finally, place the metal cover over the roof and secure around all four sides using 40mm round head nails starting at the corners and working round.