




Assembly instructions for Shallow National/Commercial Roof

Place together the side walls ensuring the vent cut outs are facing outwards and are opposite each other. Glue and nail the walls together as shown using the 24 x 40mm round head nail.

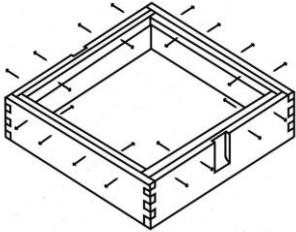

Next position the roof battens into place Using glue as well as nails to ensure they are secure. Use the 25mm pins to secure from inside and the 40mm pins from the outside.

Next, ensuring the roof is square and the vents are near the top, nail on the top roof panel using 8 x 40mm round head nails. Ensure the vent grilles line up with the side cut-outs.

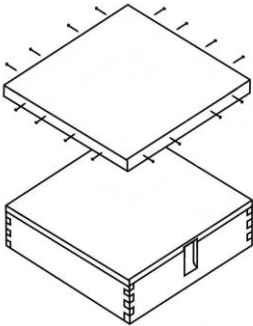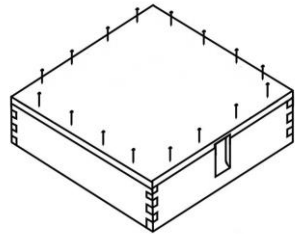

Finally, place the metal cover over the roof and secure around all four sides using 40mm round head nails starting at the corners and working round.