


## Assembly instructions for WBC Brood and Super

A WBC Brood & Super both comprise of two outer walls, two inner walls, four blocks and two strip bars. The outer walls each have two long grooves. The inner walls are smaller and rectangle in shape, one edge is chamfered, this is the edge the frame sits on when assembled. Included are all nails for assembly.

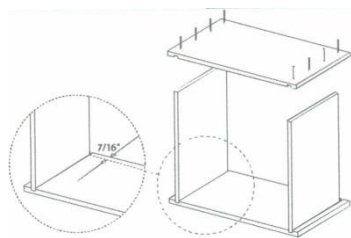

16 or  
x

Start by marking the outer walls 7/16" down.

Then locate the inner walls with the chamfered edges sloping down and outwards into the rebates. The top edge of the inner walls must be in line with your mark 7/16". Nail both side panels into place as shown using the 40mm lost head nails (the supers only use 3 on each side)




4x 4x

Next place the 2 of the side blocks into position as shown, make sure they are flush to corners. Nail using 25mm pins from the inside and 40mm lost head nails externally as shown.



Fit the second pair of blocks between the side panels and nail side strips to the side panels flush to the top edge of the side panels using 25mm pins.

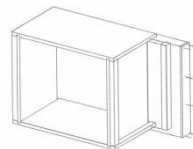

12x



4x

Nail through side walls using 25mm pins ensuring the side blocks remain flush with the lower edge of side strip.

