
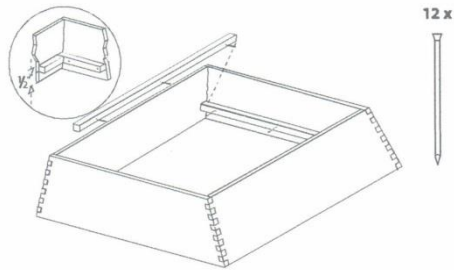




## Assembly instructions for WBC Lift with and without Porch

Fit the sides of the lift together as shown. Nail through each dovetail a 40mm lost head nail as shown, 12 per corner. Check the lift is square as work.

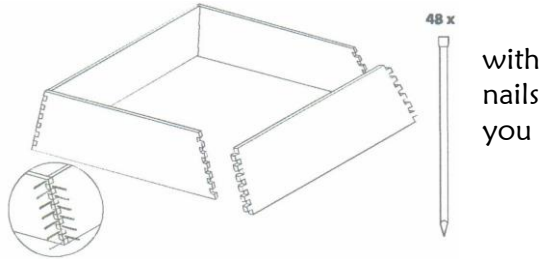

Next position the lift support battens  $\frac{1}{2}$ " up from the lower edge as shown and nail each one into place with 3 x 25mm pins.

If you are assembling a lift with a porch position the porch base, ensuring it is the correct way as shown so that the top edge is  $1\frac{11}{16}$ " above the lower edge of the lift. Fix into place with the 40mm black screws as shown.

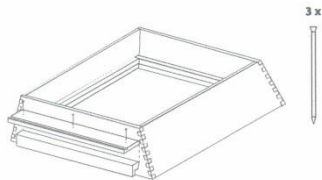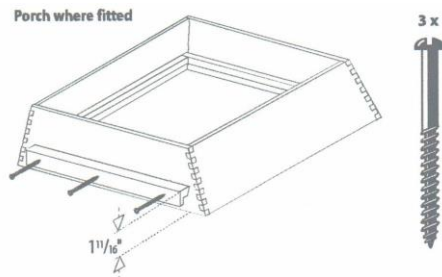

Next place the porch roof with the drop groove uppermost and outwards as shown. Nail into place with the 25mm pins